

A1526

6 Ch 15 kV 1/0.1 mA Common Floating Return Dual Range Board



Features



- 6 independently controllable High Voltage channels
- Output voltage: $0 \div 15000$ V
- Dual range current:
 - High Power: 1 mA (100 nA monitor resolution)
 - High resolution: 0.1 mA (10 nA monitor resolution)
- Available with Negative / Positive Polarity
- CPE HV connectors
- **Floating Type:** Common Floating Return
- Low ripple
- Under/over-voltage alert, overcurrent and max. voltage protection
- Interlock logic for unit enable
- Software Tools for easy channel management

Description

The CAEN Mod A1526 is a double width board (10 TE wide) that houses 6 independent high voltage channels.

The channels share a Common Floating Return, which is insulated from the chassis/crate ground. This feature may help to minimize problems of ground-loops. The board is available with positive or negative output polarity Channels are delivered with CPE HV connectors. Consult our **connectors reference page** for technical information.

The output voltage range is **0 ÷ 15000 V**, with **1 V** monitor resolution. The output channels offer **dual current ranges** (software selectable):

High Power: 0 ÷ 1 mA	High Resolution: 0 ÷ 0.1 mA
I set resolution: 100 nA	I set resolution: 10 nA
I mon resolution: 100 nA	I mon resolution: 10 nA

Independently programmable for each channel:

Output voltage:	0 ÷ 15000 V	Step: 1 V
Current limit (Iset):	0 ÷ 1 / 0.1 mA selectable	Step: 100 / 10 nA
V Ramp up/down:	1 ÷ 500 V/s	Step: 1 V/s
TRIP parameter:	0 ÷ 999.9 s; 1000 s = Infinite	Step: 0.1 s

Safety features include:

- **Channels:** can be enabled or disabled through the Global Interlock logic.
- **Overvoltage and Undervoltage warning:** when the output voltage differs from the programmed value.
- **Overcurrent detection:** when a channel attempts to exceed the programmed current limit, it signals an "overcurrent" condition and enters TRIP status. The output voltage is adjusted to keep the current below the programmed limit for a programmable TRIP time, after which the channel is switched off. If TRIP is set to "constant current mode", the channel behaves as a current source.
- **Hardware VMAX:** maximum output voltage can be set, via front panel potentiometer, at the same common value for all the board channels. VMAX value can be read out via software.

To create cables compatible with the CPE HV connectors on this board, CAEN provides the mate cable connector (Model A997).

CAEN provides a complete software range to control, monitor and configure its Power Supply products.

- **GECO2020 General Control Software**
- **CAEN HV Wrapper Library**
- **HiVoCS web tool**
- **OPC Server for CAEN Power Supplies**
- **EPICS Service**

These tools, which support the most used operating systems, ranging from low level libraries (**CAEN HV Wrapper Library**), to be used as a source for customer designed software, to the WEB interface (**HIVOCS**) available on each mainframe, up to the all-inclusive Control Software (**GECO2020**) with user friendly graphical interfaces, to meet any application needs.

Advanced control via OPC Server (**CAEN OPC Server**) and EPICS (**EPICS IOC**) is supported, to easily include CAEN power supplies within existing setups featuring such standards.

- **All tools are available for free download.**

Universal Multichannel Power Supply Systems (Mainframes)

Universal Multichannel Power Supply Systems, or Mainframes, are modular systems designed to house and control High Voltage (HV) and Low Voltage (LV) boards, providing power for particle detectors and their

associated electronics in standard 19" racks. CAEN offers four mainframe versions:

- **SY4527:** A large experimental system. This 19" wide / 8U high mainframe can house **up to 16 HV/LV boards**. It offers a power output from 600W up to a maximum of **4200W**, depending on installed Power Supply Units and display type. Local control is optionally available via a 10.4" or 5.7" LCD Touchscreen.
- **SY5527:** A more compact laboratory version. This 19" wide / 4U high mainframe can house **up to 6 HV/LV boards**. Its power output ranges from 600W up to a maximum of **1800W**, depending on Power Supply Units. Optional local control is available via a 5.7" LCD Touchscreen.
- **SY4527LC:** A cost-effective alternative with a shorter depth (~20cm compared to standard SYx527). This 19" wide / 8U high mainframe houses **up to 10 boards** and includes a **600W power supply**. It does not include an LCD display. It is fully compatible with SY4527 and SY5527 boards.
- **SY5527LC:** Also a cost-effective, shorter depth alternative (~20cm compared to standard SYx527). This 19" wide / 4U high mainframe houses **up to 4 boards** and includes a **400W power supply**. It does not include an LCD display. It is fully compatible with SY4527 and SY5527 boards.

All systems offer modular design for simplified upgrades and maintenance and can be controlled remotely via Ethernet.

Technical Specifications

No. of Channels

6 (Common Floating Return)

Output Voltage

0÷15 kV

Polarity

Positive / Negative depending on purchased version

Max. Output Current

low range 100 μ A; high range 1mA

Voltage Set Resolution

1 V

Voltage Monitor Resolution

1 V

Current Set Resolution

10 nA /100 nA depending on current range

Current Monitor Resolution

10 nA /100 nA depending on current range

VMAX hardware

0÷15 kV common for all the board channels

VMAX hardware accuracy

\pm 2% of FSR

VMAX software

0÷15 kV settable for each channel

VMAX software resolution

1 V

Ramp Up/Down

1÷500 Volt/sec, 1 Volt/sec step

Voltage Ripple

< 30 mVpp

Voltage Monitor vs. Output Voltage Accuracy

\pm 0.3% \pm 2 V

Voltage Set vs. Voltage Monitor Accuracy

$\pm 0.3\% \pm 1 \text{ V}$

Current Monitor vs. Output Current Accuracy

$\pm 2\% \pm 1 \mu\text{A}$ (1 mA range) $\pm 2\% \pm 0.1 \mu\text{A}$ (100 μA range)

Current Set vs. Current Monitor Accuracy

$\pm 2\% \pm 0.1 \mu\text{A}$ (1 mA range) $\pm 2\% \pm 0.01 \mu\text{A}$ (100 μA range)

Ordering Options

Code	Description	
WA1526XAAAAA	A1526P - SYx527 H.V. channels +15 KV 1/0.1 mA - CPE Conn. common floating (6 ch 10TE wide)	RoHS
WA1526XNAAAA	A1526N - SYx527 H.V. channels -15 KV 1/0.1 mA - CPE Conn. common floating (6 ch 10TE wide)	RoHS


Accessories

HV CABLES



High Voltage Cable Assemblies

A997

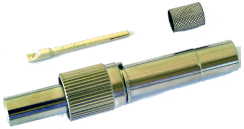

HV coaxial cable connector for A1526


Related Products

SY5527



Universal Multichannel Power Supply System / 19"wide, 4U-high (6 slot)

SY4527LC

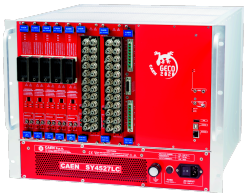

Universal Multichannel Power Supply System Low Cost / 19"wide, 8U-high (10 slot)

SY5527LC



Universal Multichannel Power Supply System Low Cost / 19"wide, 4U-high (4 slot)

SY4527



Universal Multichannel Power Supply System / 19"wide, 8U-high (16 slot)

Gallery



CPE HV connector (Factory Name: CPE
23.100.151.046)

This document, or parts thereof, may not be reproduced in any form or by any means without written permission from Caen S.p.A. Although every effort has been made to ensure the accuracy of information presented in this catalog, Caen S.p.A reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it © Caen S.p.A - 2024

CAEN S.p.A.

Via Vetraia 11
55049 - Viareggio
Italy

Phone +39.0584.388.398

Fax +39.0584.388.959

info@caen.it

www.caen.it

CAEN GmbH

Brunnenweg 9
64331 Weiterstadt, Germany

Phone +49 (0)212.254.4077

Mobile +49 (0)151.16.548.484

info@caen-de.com

www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA

Phone +1.718.981.0401

Fax +1.718.556.9185

info@caentechnologies.com

www.caentechnologies.com

CAENspa India Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri West
Mumbai, Maharashtra 400053, India

info@caen-india.in

www.caen-india.in

