

R1470ET

**8/4 Ch Reversible 8
kV/3 mA (8 W)
Desktop 19" Power
Supply Module
(USB/Ethernet/T.scr
een)**



Features



- 4 or 8 independent channels in a 19" rack unit (110/220V AC Powered)
- 8 kV / 3mA output range
- Max output power:
 - 9 W (<3 kV output)
 - 8 W (>3 kV output)
- Channels with individually selectable positive or negative polarity
- SHV coaxial output connectors
- Common floating return
- Low Ripple
- Under/over-voltage alert, overcurrent and max. voltage protection
- Interlock logic for board enable and Individual channel kill
- 50 nA Current monitor resolution (with x10 Imon-Zoom: 5 nA)
- 2.8" color touch screen display
- Local and Remote control (USB2.0/Ethernet)
- Daisy-chain capability (4 channel only)
- Software Tools for easy channel management

Description

The CAEN **Mod. R1470ET** provides **4 or 8** (depending on version) independent High Voltage channels in a 19" rack unit (110/220V AC Powered). Each channel can provide a **±8 kV** max voltage, a **3 mA** max current and a 9 W max power (8 W max power when output voltage is larger than ±3 kV). The output polarity is independently selectable for each channel.

Channels have **common floating return** (common return insulated from the crate ground); HV outputs are delivered through SHV connectors. The HV output RAMP-UP and RAMP-DOWN rates may be selected independently for each channel in the range 1÷500 V/s in 1 V/s steps. The module features 50 nA Iset/Imon resolution. Zoom (x 10) for Imon increases resolution to 5nA.

Module control can take place either **locally** thanks to a **2.8" Touchscreen Graphic color LCD display** with a completely redesigned user interface or **remotely**, via **USB 2.0** or **Ethernet**.

SHV connector

19" 2U, 4/8 channels for Mod. R1470ET

Consult our **connectors reference page** for technical information.

A complete set of **free software Tools** is available to control this unit: **GECO2020** with user friendly GUI and **CAEN HV Wrapper library** for custom SW development. **EPICS** and **LabVIEW** also supported.

Safety features allows the module to perform as a current generator and includes:

Interlock	Common Interlock logic for channels enable/disable and individual inputs signal for channel Kill function
Overvoltage and Undervoltage	warning when the output voltage differs from the programmed value by more than 2% of set value (minimum 10V)
Overcurrent detection	if a channel tries to draw a current larger than its programmed limit, it enters TRIP status, keeping the maximum allowed value for a programmable time (TRIP), before being switched off
VMAX	Programmable VMAX protection limit

Technical Specifications

Packaging

19" rack (h: 2U; d: 360mm). Weight: ~9kg (2-4 ch), 10.5kg (8 ch);

Output channels

4-8 channels, Common Floating Return, SHV connector
Positive or Negative Polarity (requires internal setting)

Output ranges

8 kV / 3 mA (IMonRange = High)
8 kV / 300 μ A (IMonRange = Low) - Imon Zoom Active

Max. Ch. Output Power

9 W (Vset < 3 kV)
8 W (Vset > 3 kV)

Vset Resolution

200 mV

Vmon Resolution

200 mV

Iset Resolution

50 nA

Imon Resolution

50 nA (IMonRange = High)
5 nA (IMonRange = Low) - Imon Zoom Active

Vmax

0 \div 8100 V Absolute maximum HV level that the channel is allowed to reach, independently from the preset value Vset.
Output voltage cannot exceed the preset value Vmax. The accuracy is 1 % \pm 5 V

Vmax resolution

\pm 1 V

Alarm output

Open collector, 100 mA maximum sink current

Interlock input

LOW: < 1 V; current~5mA; HIGH: 4 \div 6 V

Ramp Up/Down

1 \div 500 Volt/s, 1 Volt/s step

Trip

- Max. time an “overcurrent” can last (seconds). A channel in “overcurrent” works as a current generator; output voltage varies in order to keep the output current lower than the programmed value.
- “Overcurrent” lasting more than set value (1 to 9999) causes the channel to “trip”.
- Output voltage will drop to zero either at the Ramp-down rate or at the fastest available rate, depending on Power Down setting; in both cases the channel is put in the OFF state.
- Trip range: 0 ÷ 999.9 s; 1000 s = INFINITE. Step = 0.1 s (If trip= INFINITE, “overcurrent” lasts indefinitely)

Voltage Ripple

20 ÷ 1000 Hz:

- 3 kV/200 μ A: Typical: 20 mVpp; Maximum: 25 mVpp
- 3 kV/3 mA: Typical: 20 mVpp; Maximum: 30 mVpp
- 8 kV/800 μ A: Typical: 25 mVpp; Maximum: 30 mVpp

1 ÷ 20000 kHz:

- 3 kV/200 μ A: Typical: 5 mVpp; Maximum: 10 mVpp
- 3 kV/3 mA: Typical: 5 mVpp; Maximum: 10 mVpp
- 8 kV/800 μ A: Typical: 10 mVpp; Maximum: 15 mVpp

Vmon vs. Vout Accuracy

$\pm 0.02\%$ of read value $\pm 2V$

Vset vs. Vout Accuracy

$\pm 0.02\%$ of read value $\pm 2V$

Imon vs. Iout Accuracy

$\pm 2\%$ of read value $\pm 2 \mu A$ (IMonRange = High)
 $\pm 2\%$ of read value $\pm 200 nA$ (IMonRange = Low) - Imon Zoom Active

Iset vs. Iout Accuracy

$\pm 2\%$ of read value $\pm 2 \mu A$ (IMonRange = High)
 $\pm 2\%$ of read value $\pm 200 nA$ (IMonRange = Low) - Imon Zoom Active

Ventilation Fan

60x60 24V; 62 dBA maximum noise level

Humidity range

0 ÷ 80%

Storage temperature

-10 ÷ 70°C

Operating temperature

0 ÷ 45°C

Vout / Temperature coefficient

max. 50 ppm/°C

Imon / Temperature coefficient

max 100 ppm/C°; max 300 ppm/C° with Imon X10 zoom

Long term stability Vout vs. Vset

± 0.02% (after one week @ constant temperature)

Ordering Options

Code	Description	
WR1470ETDXAA	R1470ETD - 8 Channel 8kV/3mA(9W) 19" HV Power Supply Module with Ethernet & 2.8" Touchscreen	RoHS
WR1470ETXAAA	R1470ET - 4 Channel 8kV/3mA(9W) 19" HV Power Supply Module with Ethernet & 2.8" Touchscreen	RoHS

Accessories

A148x



Inhibit - Kill Signal BNC Adapter for HV Power Supply Modules

A1483

Inhibit - Kill Signal BNC Adapter for HV Power Supply Modules

HV CABLES



High Voltage Cable Assemblies

A1484

Inhibit - Kill Signal BNC Adapter for HV Power Supply Modules

Related Software

GECO2020



General Control Software for CAEN HV Power Supplies

Related Software Libraries

CAEN HV Wrapper Library



Library for CAEN Power Supply Control


Related Products

LabVIEW Driver (PSM - Power Supply Modules)




LabVIEW Instrument Driver for Power Supply Modules

EPICS IOC (PSM Power Supply Modules)

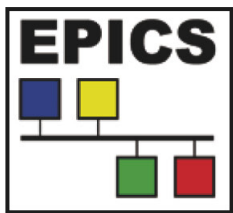

EPICS IOC for Power Supply Modules

Gallery

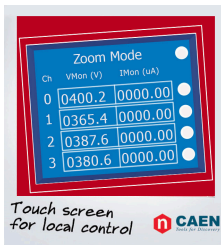

This document, or parts thereof, may not be reproduced in any form or by any means without written permission from Caen S.p.A. Although every effort has been made to ensure the accuracy of information presented in this catalog, Caen S.p.A reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it © Caen S.p.A - 2024

CAEN S.p.A.

Via Vetraia 11
55049 - Viareggio
Italy

Phone +39.0584.388.398

Fax +39.0584.388.959

info@caen.it

www.caen.it

CAEN GmbH

Brunnenweg 9
64331 Weiterstadt, Germany

Phone +49 (0)212.254.4077

Mobile +49 (0)151.16.548.484

info@caen-de.com

www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA

Phone +1.718.981.0401

Fax +1.718.556.9185

info@caentechnologies.com

www.caentechnologies.com

CAENspa India Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri West
Mumbai, Maharashtra 400053, India

info@caen-india.in

www.caen-india.in

