

A311

6 dB Attenuator



Features



Description

The **Mod. A311**, is a simple device that provides 6 dB fixed attenuation. The attenuator is 50 Ohm adapted 6 dB Attenuator with SMA female type connectors; it does not require any power supply since it is made up of resistive cells.

Technical Specifications

Attenuation

6 dB

Input impedance

50 ohm

I/O delay

< 5 ns

Accuracy

0,01

Max frequency

> 300 MHz

Max dissipated power

100 mW

Insertion loss

0.1 dB

Ordering Options

Code	Description
WA311XAAAAAA	A311 - Single Channel Fixed Attenuator (6dB) RoHS

Related Products

A309



1 dB Attenuator

A310



3 dB Attenuator

A312




12 dB Attenuator

A313



20 dB Attenuator

Gallery

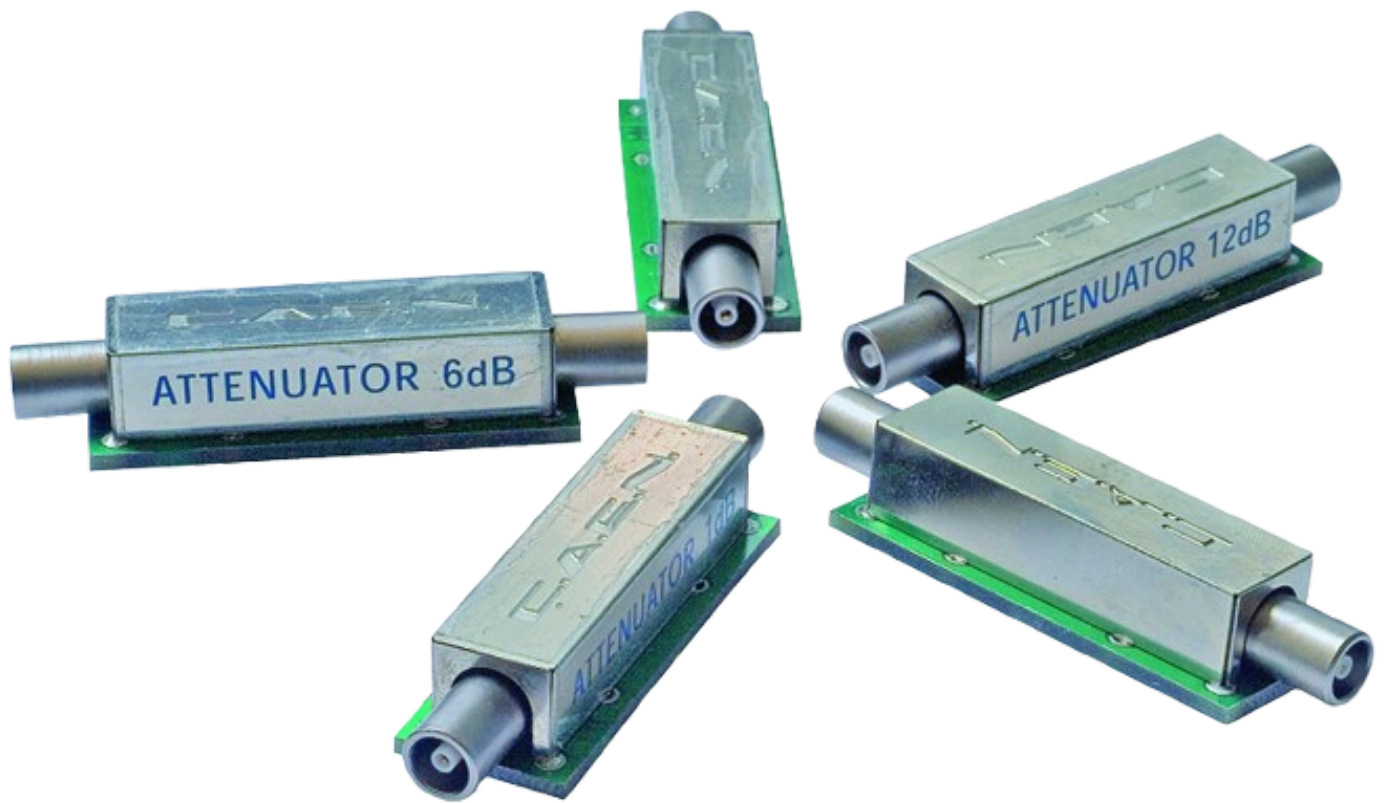

This document, or parts thereof, may not be reproduced in any form or by any means without written permission from Caen S.p.A. Although every effort has been made to ensure the accuracy of information presented in this catalog, Caen S.p.A reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it © Caen S.p.A - 2024

CAEN S.p.A.

Via Vetraia 11
55049 - Viareggio
Italy

Phone +39.0584.388.398

Fax +39.0584.388.959

info@caen.it

www.caen.it

CAEN GmbH

Brunnenweg 9
64331 Weiterstadt, Germany

Phone +49 (0)212.254.4077

Mobile +49 (0)151.16.548.484

info@caen-de.com

www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA

Phone +1.718.981.0401

Fax +1.718.556.9185

info@caentechnologies.com

www.caentechnologies.com

CAENspa India Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri West
Mumbai, Maharashtra 400053, India

info@caen-india.in

www.caen-india.in

