



DiscoverRAD Power Modules

Spare Battery / Battery Holder PM1 Cargo

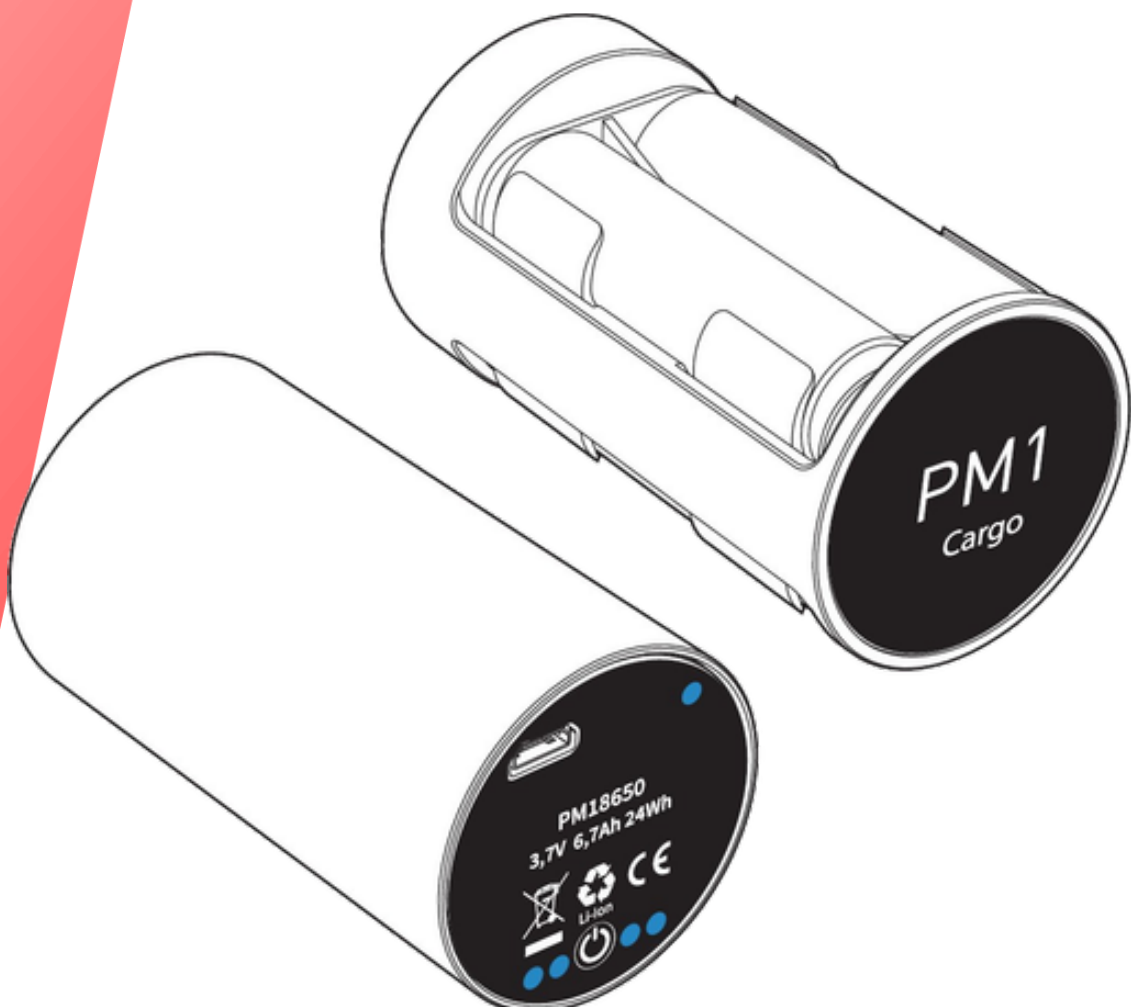

Features

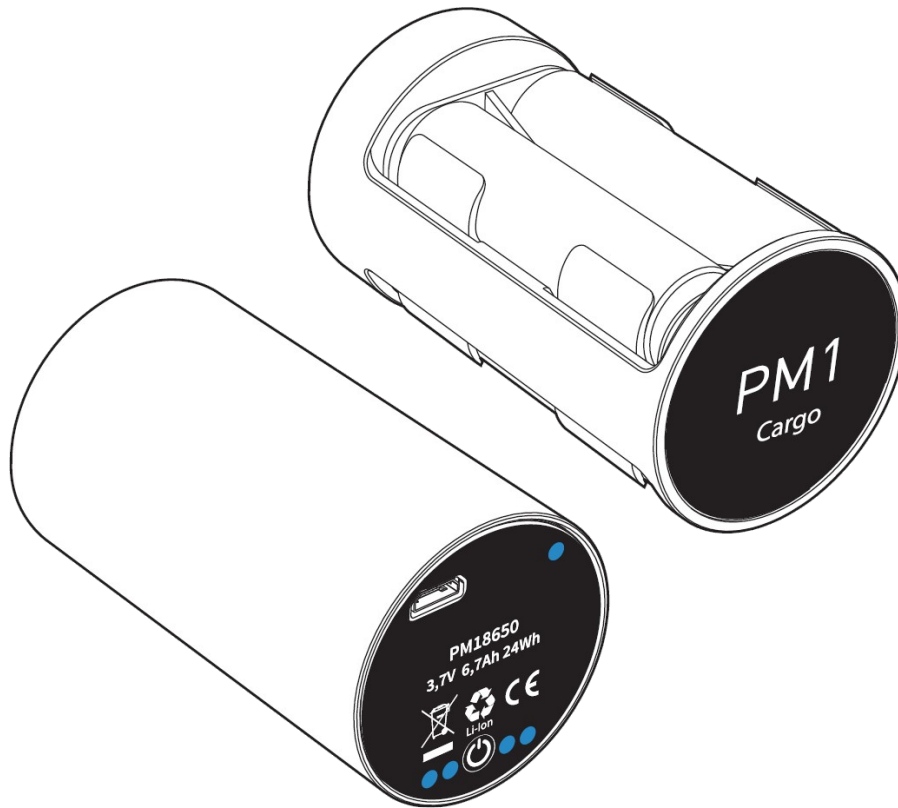

- **Spare Battery**
 - Rechargeable Lithium-ion power module (Run time > 6 h at 20 °C)
 - 4 state-of-charge LEDs / One-button test to verify remaining capacity
 - Integrated USB charging socket
 - No serviceable or removable internal parts — fully sealed, rugged design
- **Battery Holder PM1 Cargo**
 - Holds 4 standard AA batteries — no recharging infrastructure needed
 - Compatible with 1.5 V Lithium/Iron Disulfide (e.g. Energizer® Ultimate Lithium™)
 - Compatible with 1.2 V NiMH rechargeable cells
 - Same form factor as the PM18650 — drops straight into the DiscoverRAD
 -

Description

The **PM18650** is the dedicated rechargeable Lithium-ion power module for the DiscoverRAD. It provides more than 6 hours of continuous operation and can be swapped in seconds to ensure uninterrupted field use. A press of the test button lights up to four LEDs showing remaining charge at a glance, while the built-in USB socket allows recharging from any standard power source.

The **PM1 Cargo** is a battery holder that powers the DiscoverRAD using four commercially available AA cells, making it the go-to power solution wherever recharging is not an option. Compatible with high-energy Lithium/Iron Disulfide and NiMH batteries, it slots directly into the DiscoverRAD's battery compartment like any other power module. All four cells should always be replaced at the same time with fresh batteries of the same type.

Ordering Options

Code	Description	
WADRADBATTXA	Spare battery for DiscoverAD 501	RoHS
WARADPM1CARA	Battery holder PM1 Cargo for Discoverad	RoHS

Related Products

DISCOVERAD



Radionuclide Identifying Device (RID)



PM18650 - Spare battery for DiscoverAD

Battery holder PM1 Cargo for DiscoverAD

This document, or parts thereof, may not be reproduced in any form or by any means without written permission from Caen S.p.A. Although every effort has been made to ensure the accuracy of information presented in this catalog, Caen S.p.A reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it © Caen S.p.A - 2024

CAEN S.p.A.

Via Vetraia 11
55049 - Viareggio
Italy

Phone +39.0584.388.398

Fax +39.0584.388.959

info@caen.it

www.caen.it

CAEN GmbH

Brunnenweg 9
64331 Weiterstadt, Germany

Phone +49 (0)212.254.4077

Mobile +49 (0)151.16.548.484

info@caen-de.com

www.caen-de.com

CAEN Technologies, Inc.

1 Edgewater Street - Suite 101
Staten Island, NY 10305
USA

Phone +1.718.981.0401

Fax +1.718.556.9185

info@caentechnologies.com

www.caentechnologies.com

CAENspa India Private Limited

B205, BLDG42, B Wing,
Azad Nagar Sangam CHS,
Mhada Layout, Azad Nagar, Andheri West
Mumbai, Maharashtra 400053, India

info@caen-india.in

www.caen-india.in

